





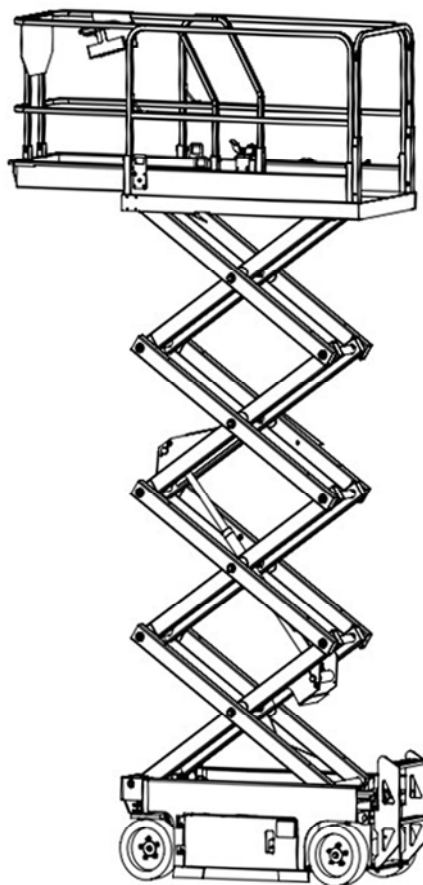


Electric Self-propelled Scissor Lift XE80N Spare Parts Instruction Manual




Menu

1. XE80N Decals Diagram-----	3
2. XE80N Decals Explanation-----	4
3. XE80N Steering Axle and Front Wheel Diagram-----	5
4. XE80N Steering Axle and Front Wheel Spare Parts Table-----	6
5. XE80N Rear Wheel and Ladder Diagram-----	7
6. XE80N Rear Wheel and Ladder Spare Parts Table-----	8
7. XE80N Left Side of Chassis Diagram-----	9
8. XE80N Left Side of Chassis Spare Parts Table-----	10
9. XE80N Right Side of Chassis Diagram-----	11
10. XE80N Right Side of Chassis Spare Parts Table-----	12
11. XE80N Chassis Pothole Parts Diagram-----	13
12. XE80N Chassis Pothole Parts Spare Parts Table-----	14
13. XE80N the Top of Chassis Diagram-----	15
14. XE80N the Top of Chassis Spare Parts Table-----	16
15. XE80N Part 1 of Scissor Boom Diagram-----	17
16. XE80N Part 1 of Scissor Boom Spare Parts Table-----	18
17. XE80N Part 2 of Scissor Boom Diagram-----	19
18. XE80N Part 2 of Scissor Boom Spare Parts Table-----	20
19. XE80N Part 3 of Scissor Boom Diagram-----	21
20. XE80N Part 1 of Scissor Boom Spare Parts Table-----	22
21. XE80N Main Stand Platform and Fence Diagram-----	23
22. XE80N Main Stand Platform and Fence Spare Parts Table-----	24
23. XE80N Extended Platform and Fence Diagram-----	25
24. XE80N Extended Platform and Fence Spare Parts Table-----	26

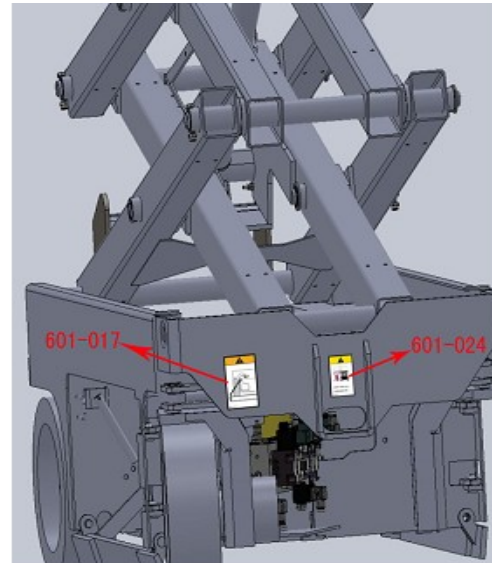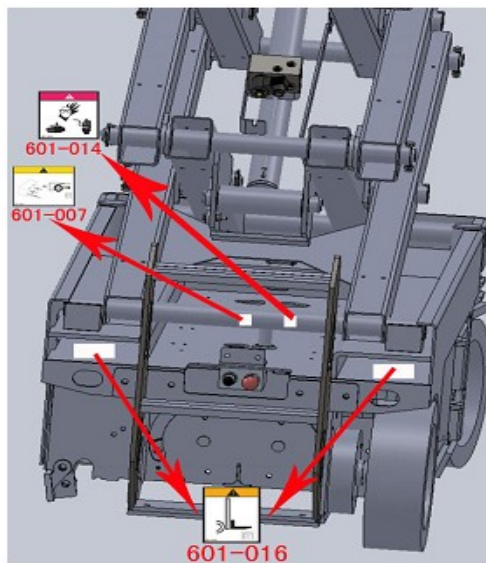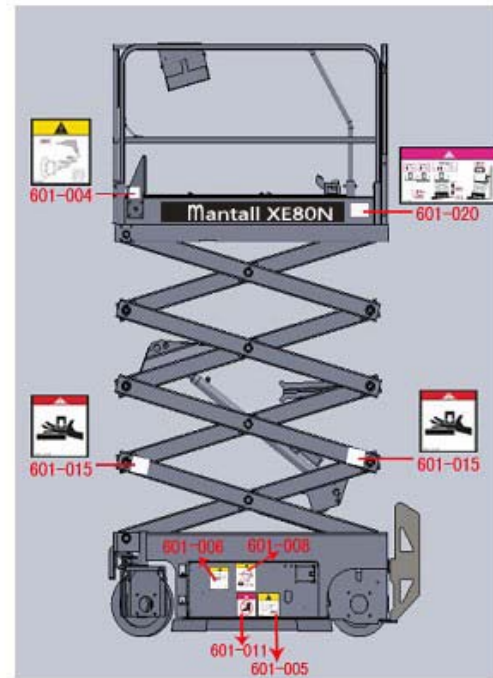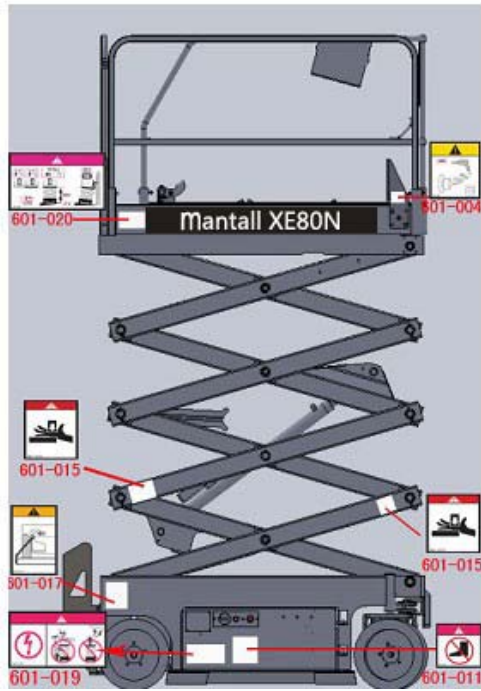



Items No.	Decals No.	Decals Explanation	Quantity
1	601-003	Forbid using when charging	1
2	601-004	Upper control power 220V	1
3	601-005	Under control power 220V	1
4	601-006	Electrolyte schematic	1
5	601-007	Hand pump	1
6	601-008	Power prohibit external use and painting	1
8	601-011	Prohibit feet	2
9	601-014	Waterproof and Anti-electric	1
10	601-015	Be careful of rolling hand	2
11	601-016	Forklift holes	2
12	601-017	Traction position	1
13	601-019	Be careful of the top item when lifting Be careful of use on the Thunderstorm days	1
14	601-020	The lift working environment load balance	1
15	601-024	To stand under the device is prohibited	1

Steering Axle Connecting and Front Wheels

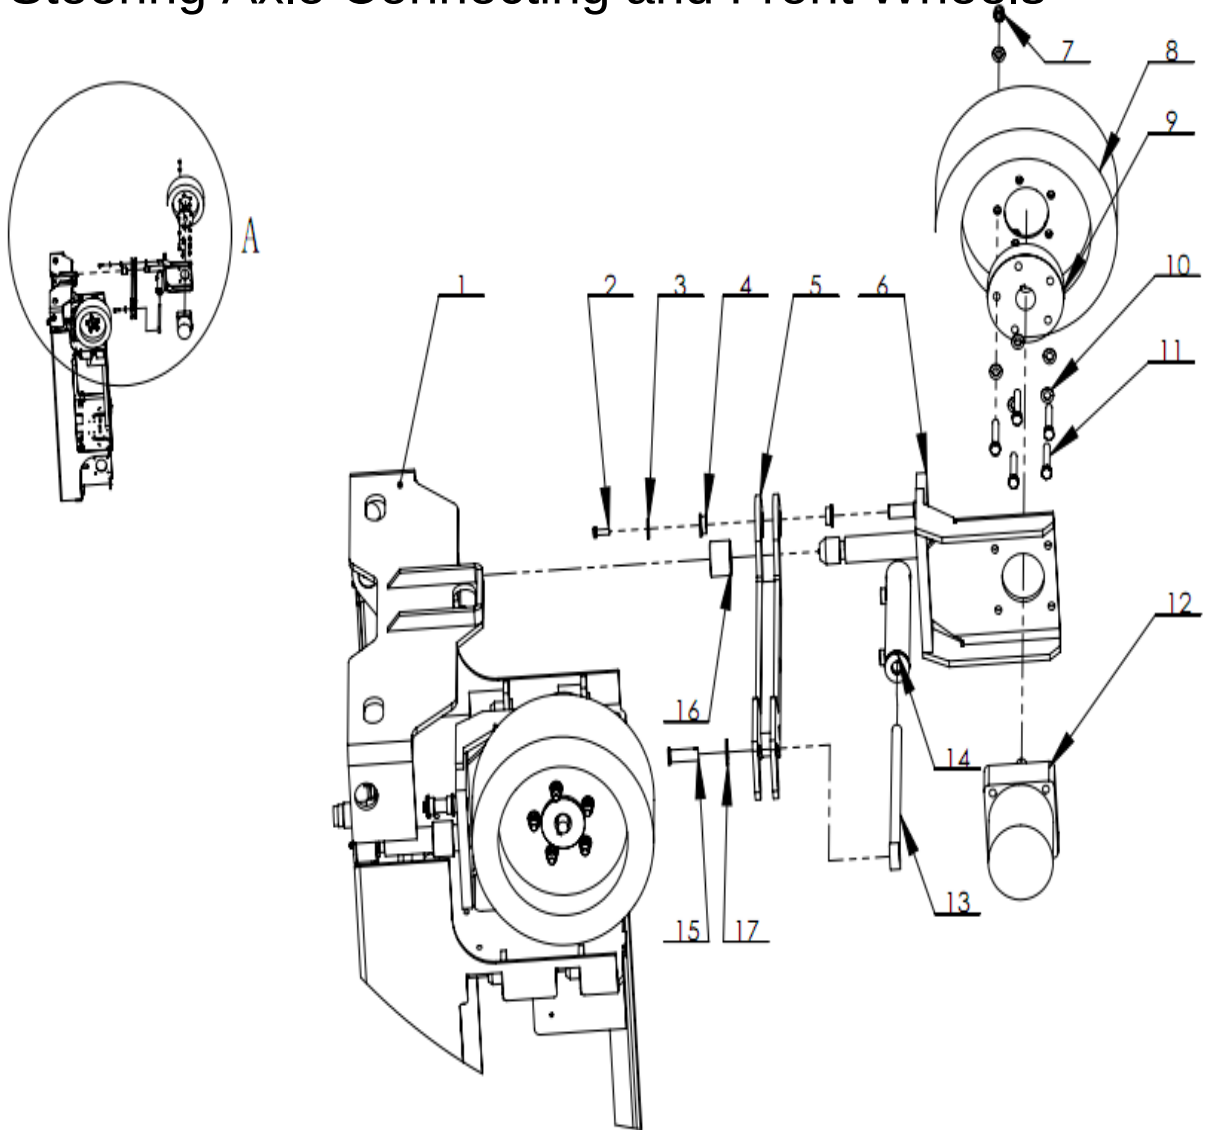


Items No.	Spare Parts No.	Spare Parts Name	Quantity
1	021005J211	Chassis frame welding	1
2	031003C012	GB5783-2000 Screw bolt M8X25	2
3	031003W009	GB/95-1985 gasket 8	2
4	021005J030	Steering levers of paper sets	4
5	021005J216	Steering welding	3
6	021005J220	Steering wheel welding	2
7	031005J041	GB6182-2000 self-locking nut M12	10
8	051005J008	Rubber wheel	2
9	051005J005	Motor wheel sets	2
10	031003W008	GB/T95-1985 gasket 12	20
11	031003C114	GB5783-2000 screw bolt M12X65	10
12	051005J020	Drive Motor	2
13	051005J018	Steering oil cylinder Piston cylinder	1
14	051005J019	Steering cylinder	1
15	031005J028	GB/T882-2002 B type pin axis 18X55	1
16	021005J053	Rotating under sleeve	1
17	031003C068	GB/97.1-1985 gasket 20	2

Ladders and Rear Wheels

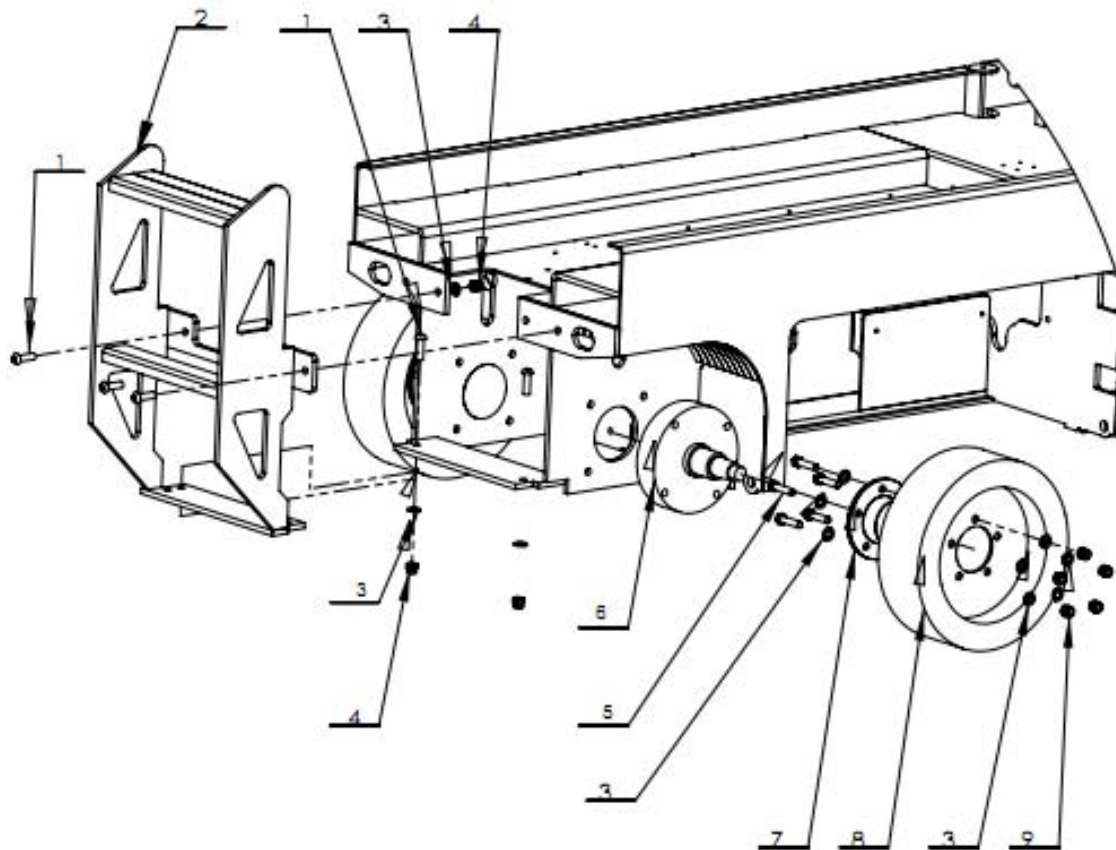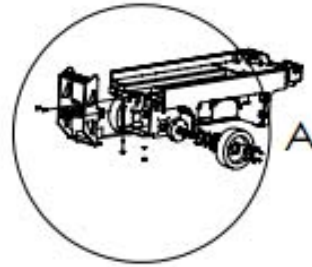


Items No.	Spare Parts No.	Spare Parts Name	Quantity
1	031005J047	GB70.1-2000 Hexagon socket head screws M12X40	6
2	021005J240	Ladder assembly	1
3	031003W008	GB/95-1985 Gasket M12	16
4	031005J041	GB6182-2000 Self-locking nut M12	6
5	051005J021	Braker	2
6	031003C008	GB5782-2000 screw bolt M12X50	5
7	051005J702	Braker sleeve	2
8	051005J008	Rubber wheel	2
9	031005J042	GB6182-2000 self-locking nut M10	5

The Left Side of Chassis

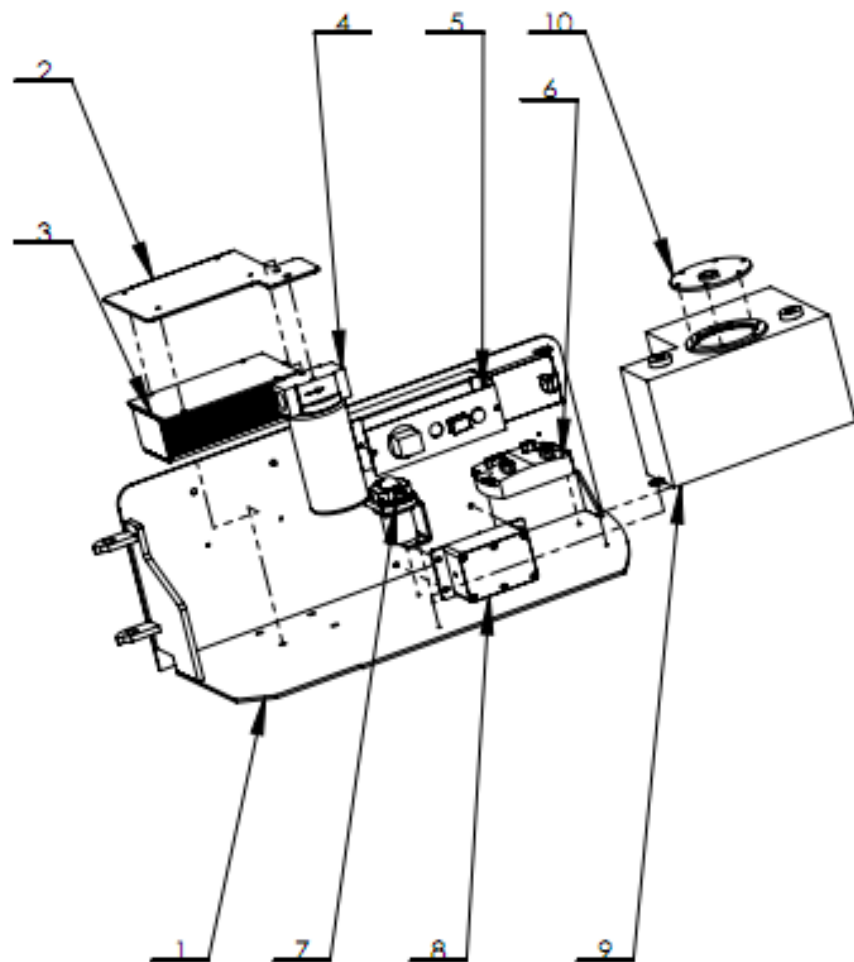



Items No.	Spare Parts No.	Spare Parts Name	Quantity
1	021005J195	Side bottom door	1
2	021005J243	Controller Installation plate	1
3	051005J028	Motor control	1
4	051005J065	Filter	1
5	021005J200	Ground control box plate	1
6	051005J023	Control	1
7	051005J028	Motor connecting	1
8	051005J029	Electrical signal converter	1
9	021005J243	Oil tank	1
10	021005J206	Oil tank dust cover	1

The Right Side of Chassis

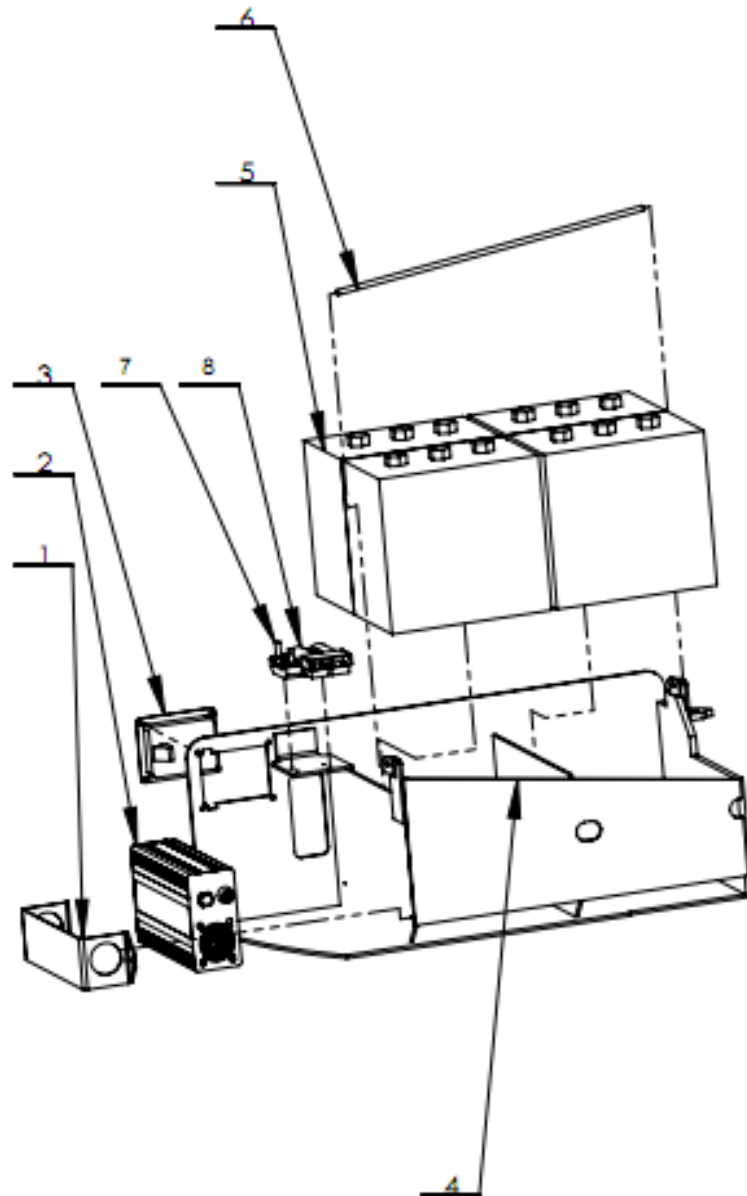


Items No.	Spare Parts No.	Spare Parts Name	Quantity
1	021005J254	Charger protection plate	1
2	051005J040	Charger	1
3	051005J015	Door lock	1
4	021005J195	Side bottom door	1
5	051005J027	Battery	4
6	021005J259	Battery block stick	1
7	051005J028	Insurance	1
8	051005J041	Double insert	1

The Pothole Part of Chassis

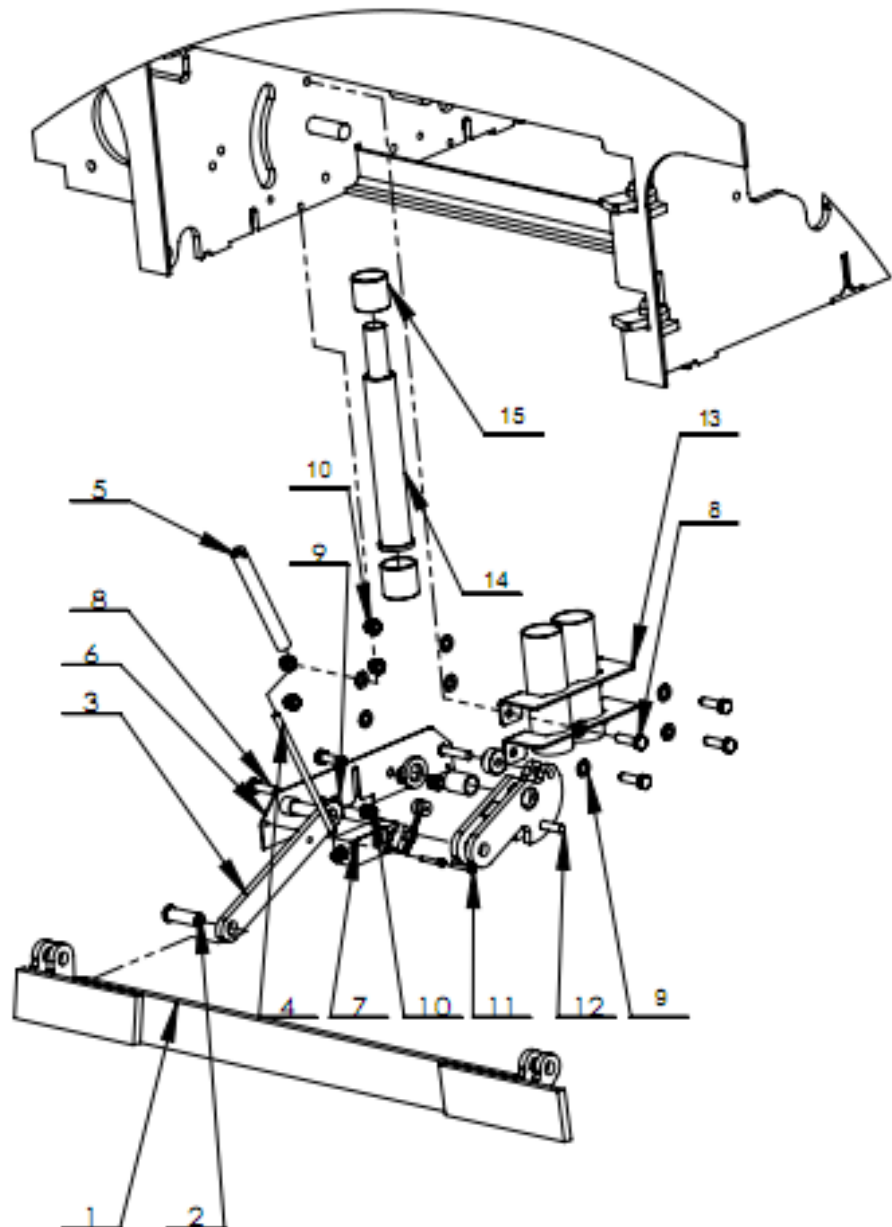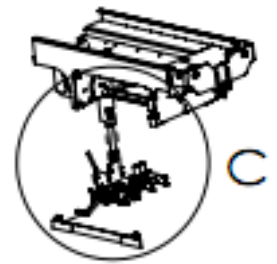


Items No.	Spare Parts No.	Spare Parts Name	Quantity
1	021005J218	Pothole plate welding	2
2	031005J025	Pothole lock pins	4
3	021005J169	Long plate	2
4	051005J011	Gas cylinder extended stem	2
5	051005J011	Gas cylinder block	2
6	021005J127	Chassis limit switch board	2
7	051005J063	limit switch	2
8	031003C022	GB5783-2000 screw bolt M10X35	12
9	031005J038	GB/T95-1985 gasket M10	20
10	031005J009	GB682-2000 self-locking nut M10	12
11	031005J053	GB/T6560-1988盘头Cruciform slot screw M5X35	4
12	021005J213	Pothole rocking bar welding	2
13	021005J215	Guiding device	2
14	021005J022	Spring column set	4
15	021005J025	Pothole paper sleeve	4

The Upper Part of Chassis

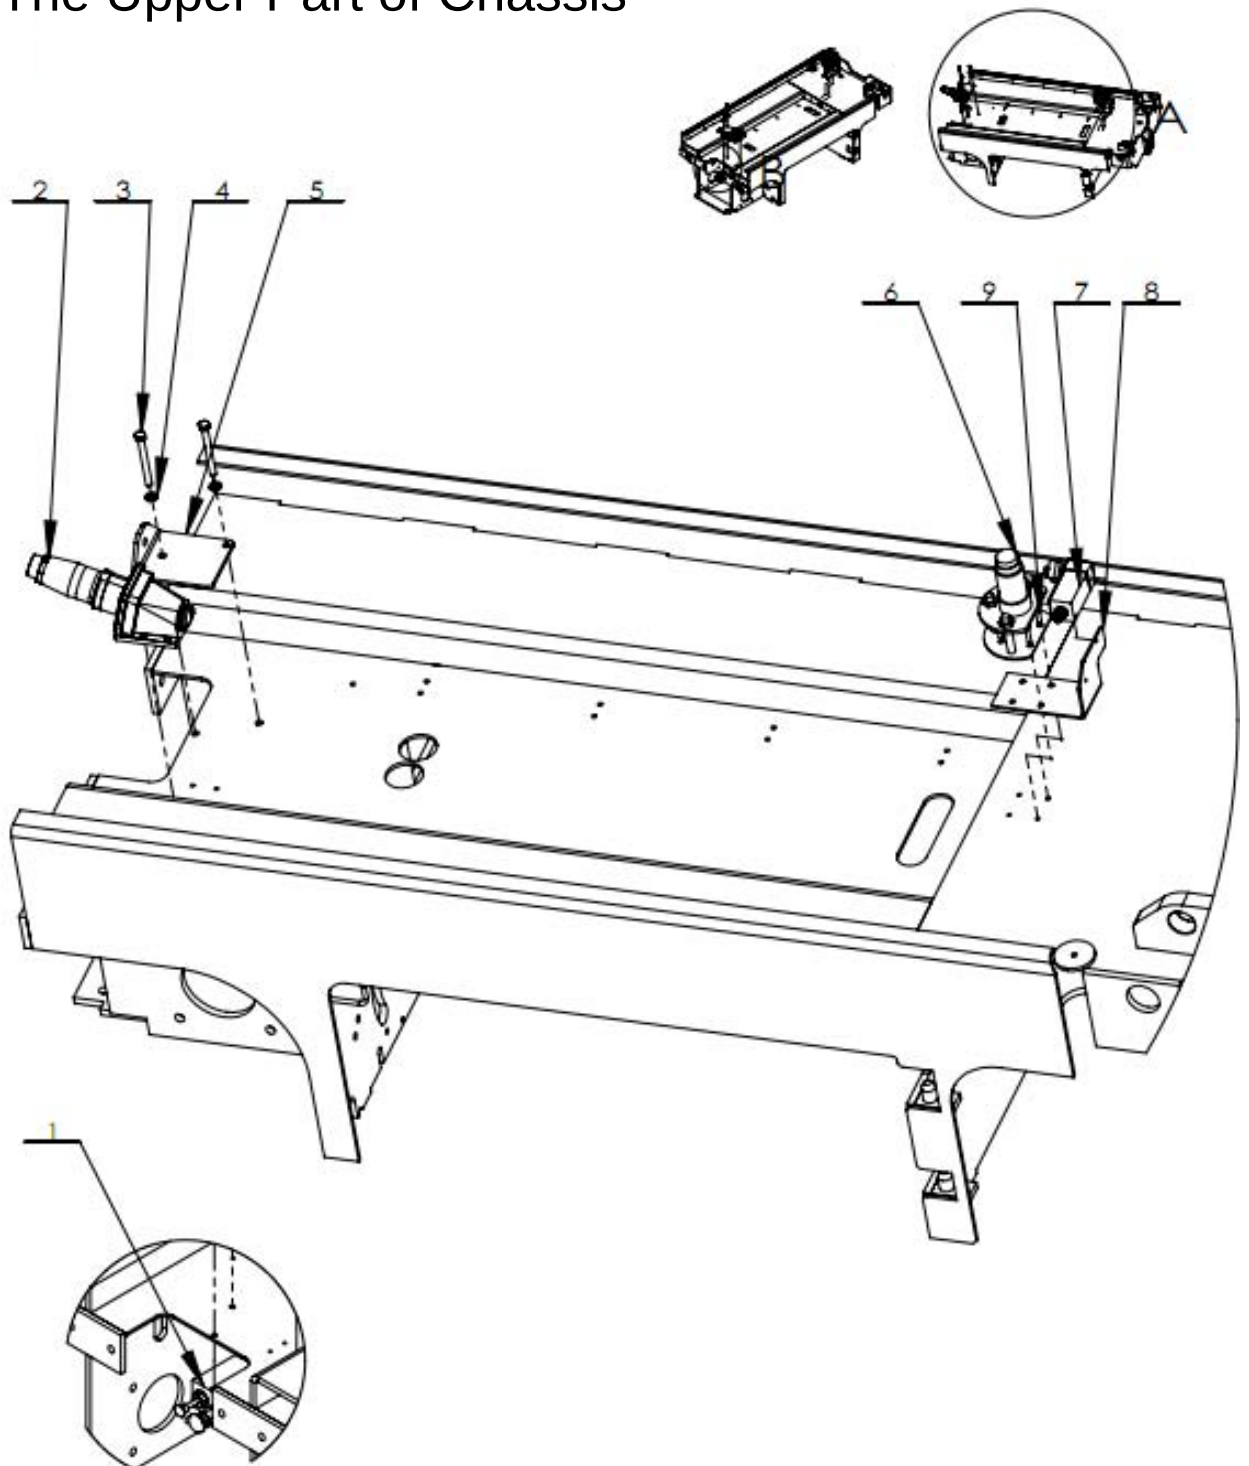


Items No.	Spare Parts No.	Spare Parts Name	Quantity
1	051005J017	Manual pump	1
2	051005J044	Europe type plug	1
3	031005J054	GB5782-2000 screw bolt M8X80	2
4	031003W009	GB95/T-1985 gasket M8	2
5	021005J138	Manual venting oil frame	1
6	051005J024	Tilt sensor	1
7	051005J055	Limit switch	1
8	021005J205	Chassis level plate	1
9	031006T013	GB70.1-2000 Hexagon socket head screws M8X25	4

The Part 1 of Scissor Boom

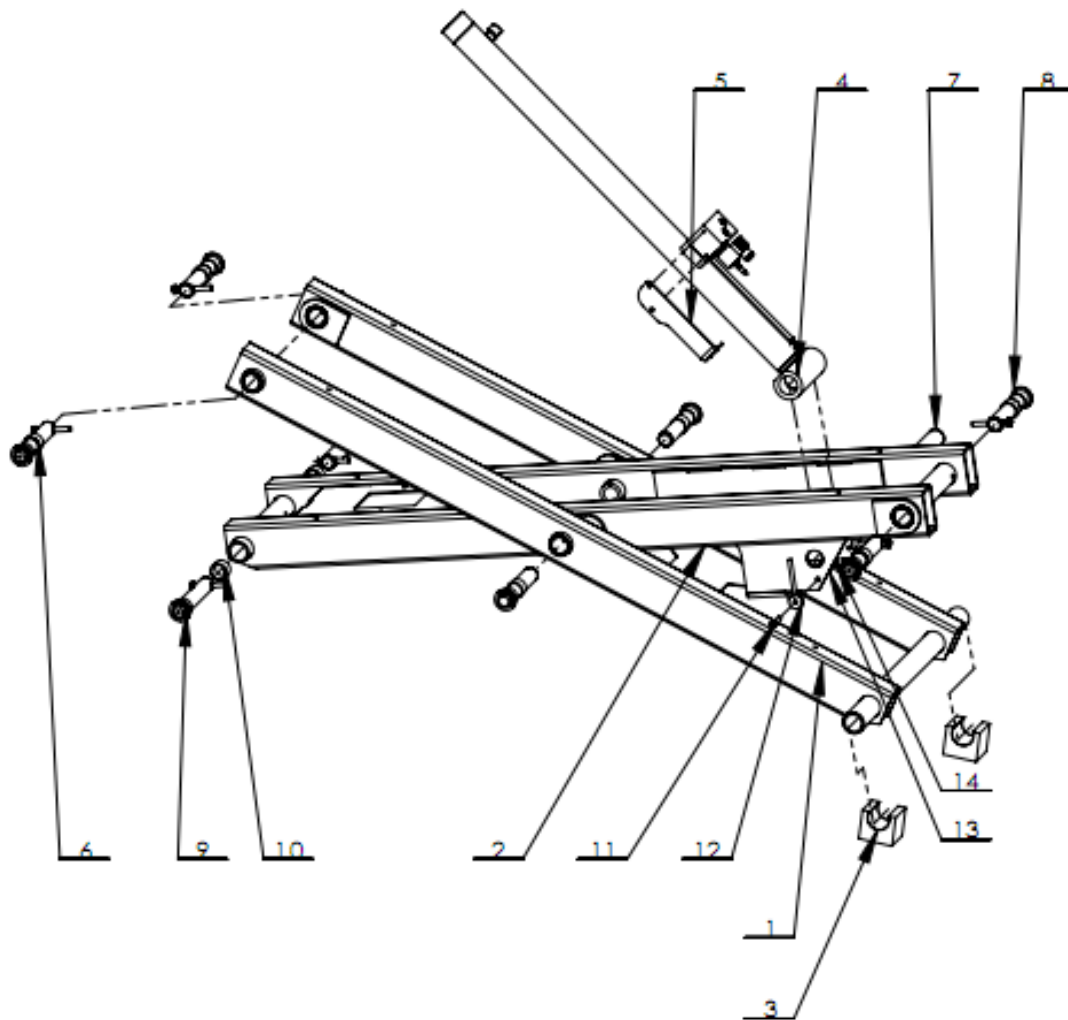


Items No.	Spare Parts No.	Spare Parts Name	Quantity
1	021005J238	Scissor middle Boom 5 assembly	1
2	021005J234	Scissor middle Boom 4 assembly	1
3	021005J038	Scissor Boom slice block	2
4	051005J018	Oil cylinder	1
5	021005J126	Valve manual fixed frame	1
6	021006J001	Bottom pin axis assembly	2
7	021005J016	Bottom oil cylinder pin axis	1
8	021006J002	Hinge long pin axis assembly	2
9	021006J003	Hinge mediate pin axis assembly	2
10	021005J057	long pin axis fixed set	2
11	031005J012	GB578-2000 screw bolt M8X35	1
12	021005J008	Axis limit pin	1
13	031003W009	GB95-2000 gasket M8	1
14	031005J039	GB6182-2000self-locking nut M8	1

The Part 2 of Scissor Boom

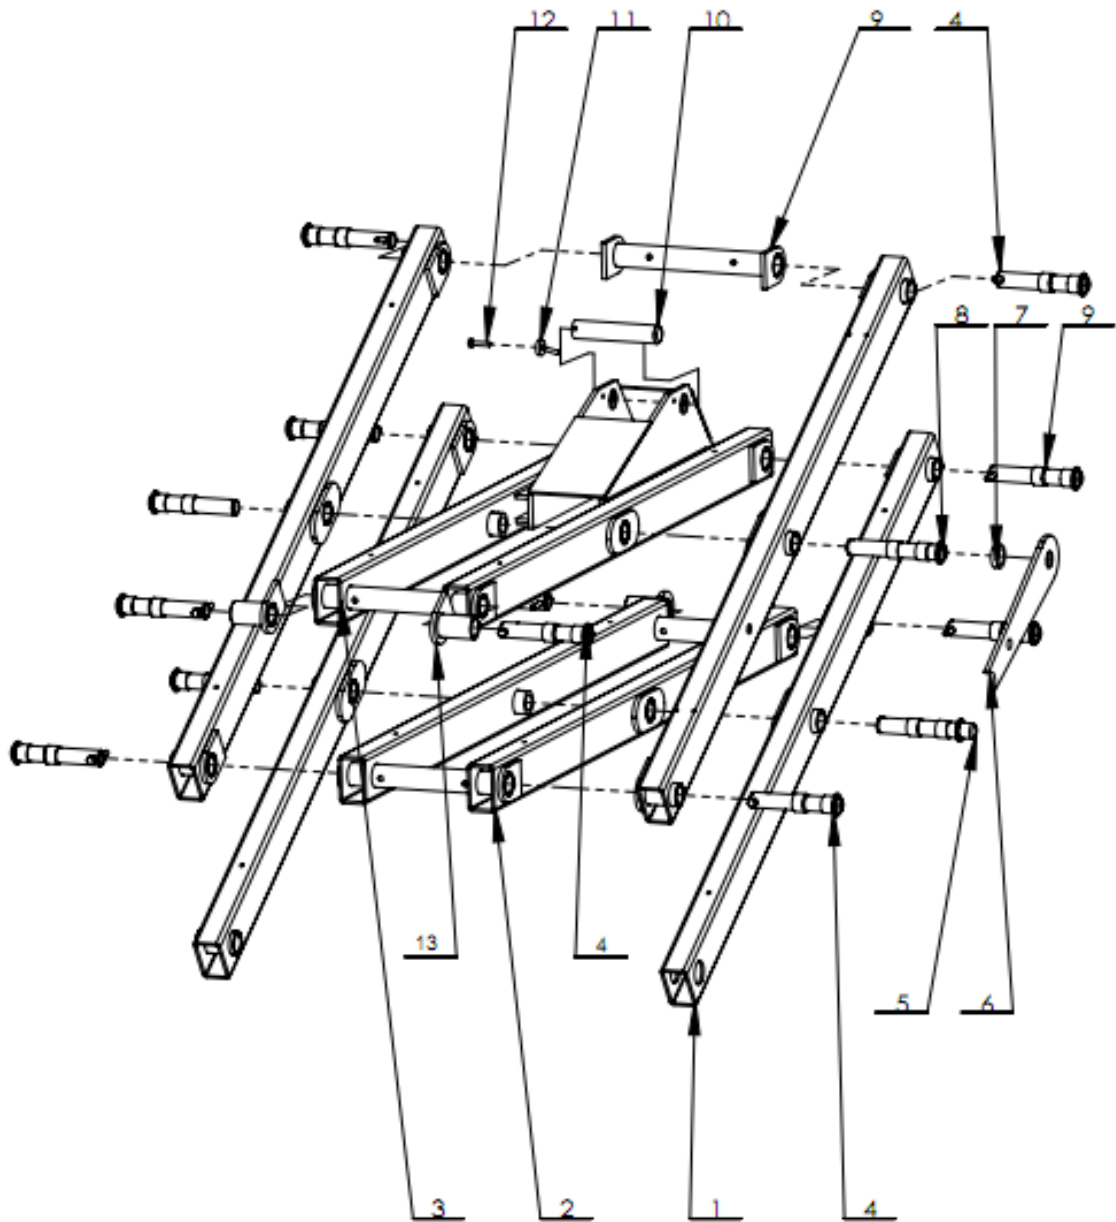


Items No.	Spare Parts No.	Spare Parts Name	Quantity
1	021005J110	Left scissor boom 2	4
2	021005J236	Scissor middle Boom 3 assembly	1
3	021005J239	Scissor middle Boom 2 assembly	1
4	021006J002	Hinge long pin axis assembly	4
5	021006J004	Hinge supporting pin axis assembly	2
6	021005J270	Maintenance supporting	1
7	021005J060	Film sleeve	2
8	021006J004	Hinge supporting plate pin axis assembly	2
9	021005J001	Scissor middle boom welding axis sleeve 1	1
10	021005J015	Oil cylinder upper block pin axis	1
11	021005J008	Axis limit pins	1
12	031005J012	GB5782-2000 screw bolt M8X35	1
13	021005J002	Scissor middle boom welding axis sleeve 2	2

The Part 3 of Scissor Boom

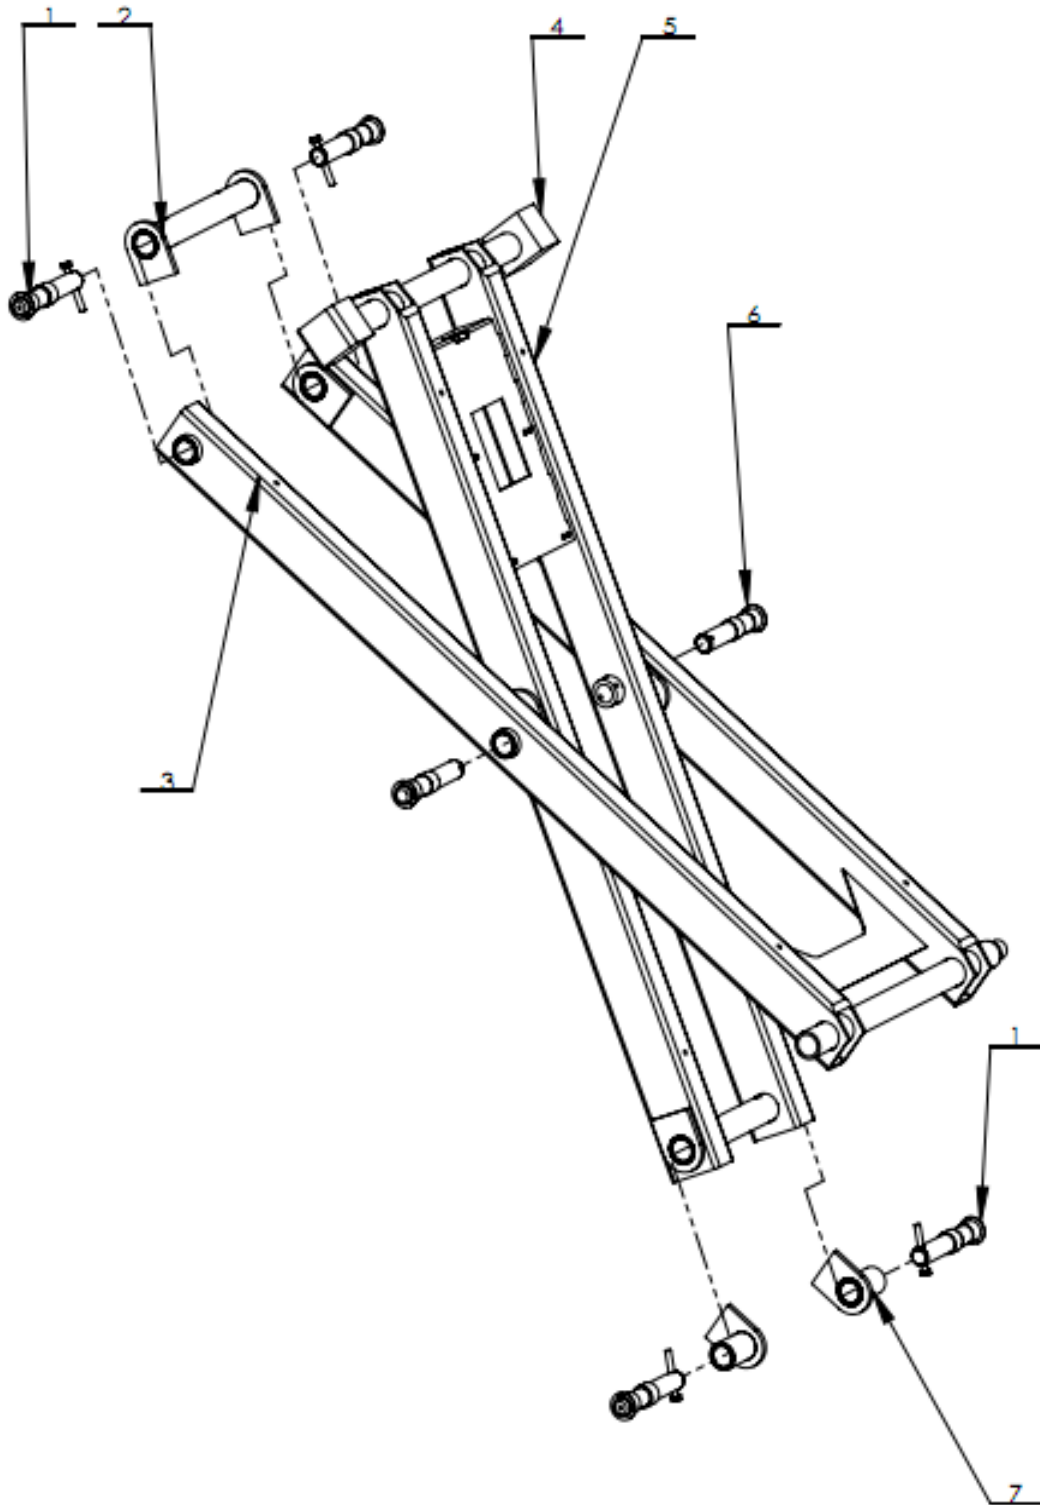


Items No.	Spare Parts No.	Spare Parts Name	Quantity
1	021005J010	Scissor long boom pin axis	2
2	021005J001	Scissor middle boom welding axis sleeve 1	1
3	021005J233	Side scissor boom upper welding assembly	1
4	021005J039	Upper slider	2
5	021005J235	Scissor middle Boom 1 assembly	1
6	021005J036	Scissor middle Boom pin axis	2
7	021005J002	Scissor middle boom welding axis sleeve 2	2

Main Platform and Guardrail

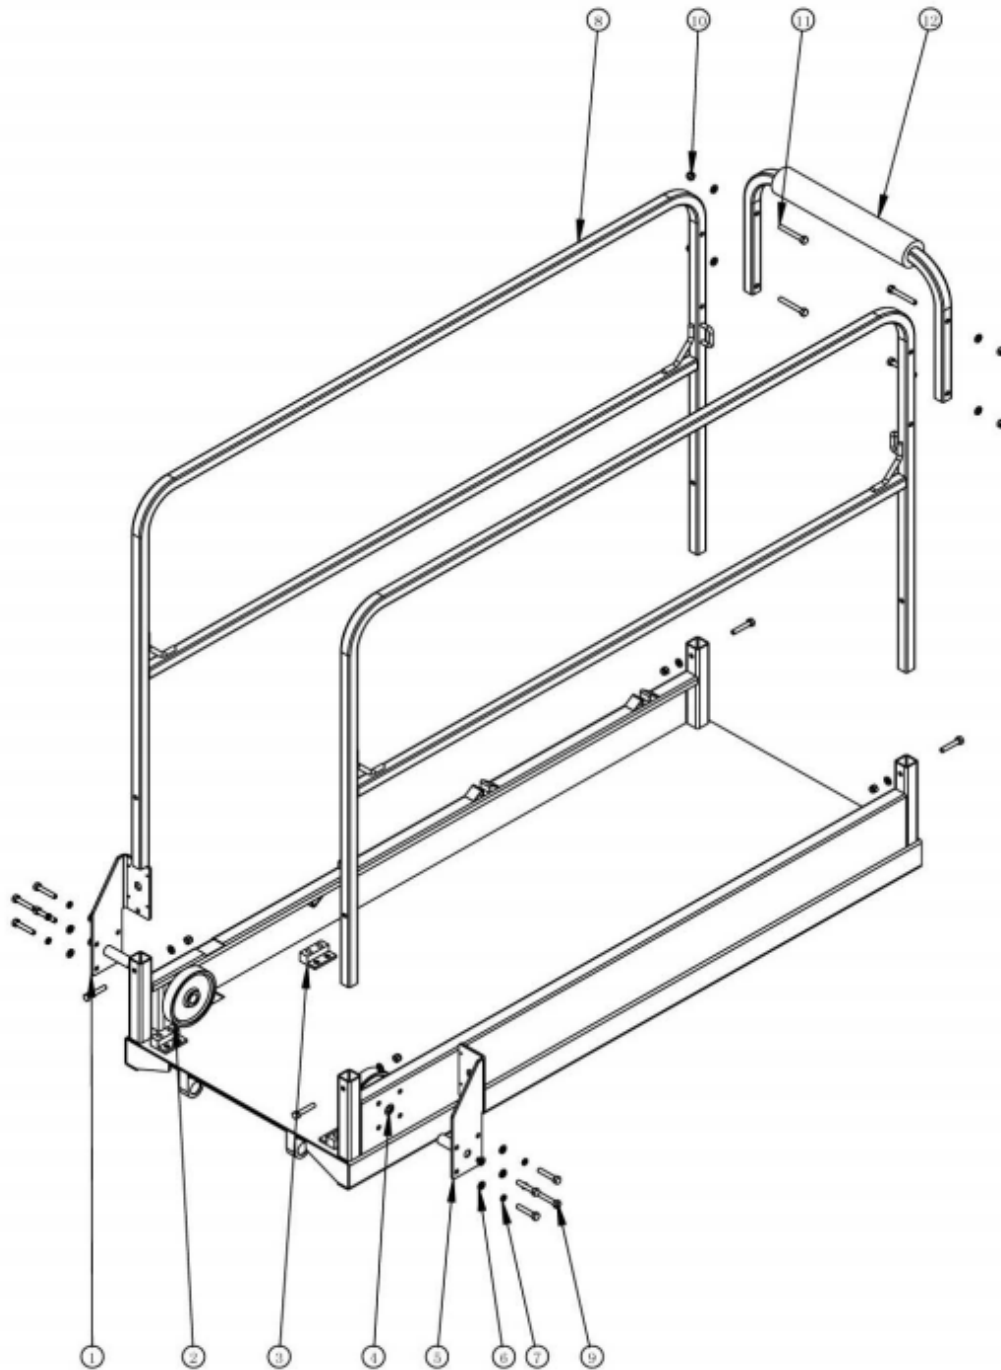

Items No.	Spare Parts No.	Spare Parts Name	Quantity
1	021005J142	Wheels fixed plate	1
2	021005J044	Pulley	2
3	021005J041	Block	4
4	021005J009	Wheel axis	8
5	021005J142	Wheels fixed plate	1
6	031005J038	GB95-2000 flat gasket M10	8
7	031005J038	GB95-2000 flat gasket M10	8
8	021005J230	Side guardrail	2
9	031005J001	GB5782-2000 screw bolt M10X45	12
10	031005J009	GB6182-2000 self-locking nut M10	8
11	031005J003	GB5782-2000 screw bolt M10X60	4
12	021005J232	Port guardrail	1

The Extended Platform and Guardrail

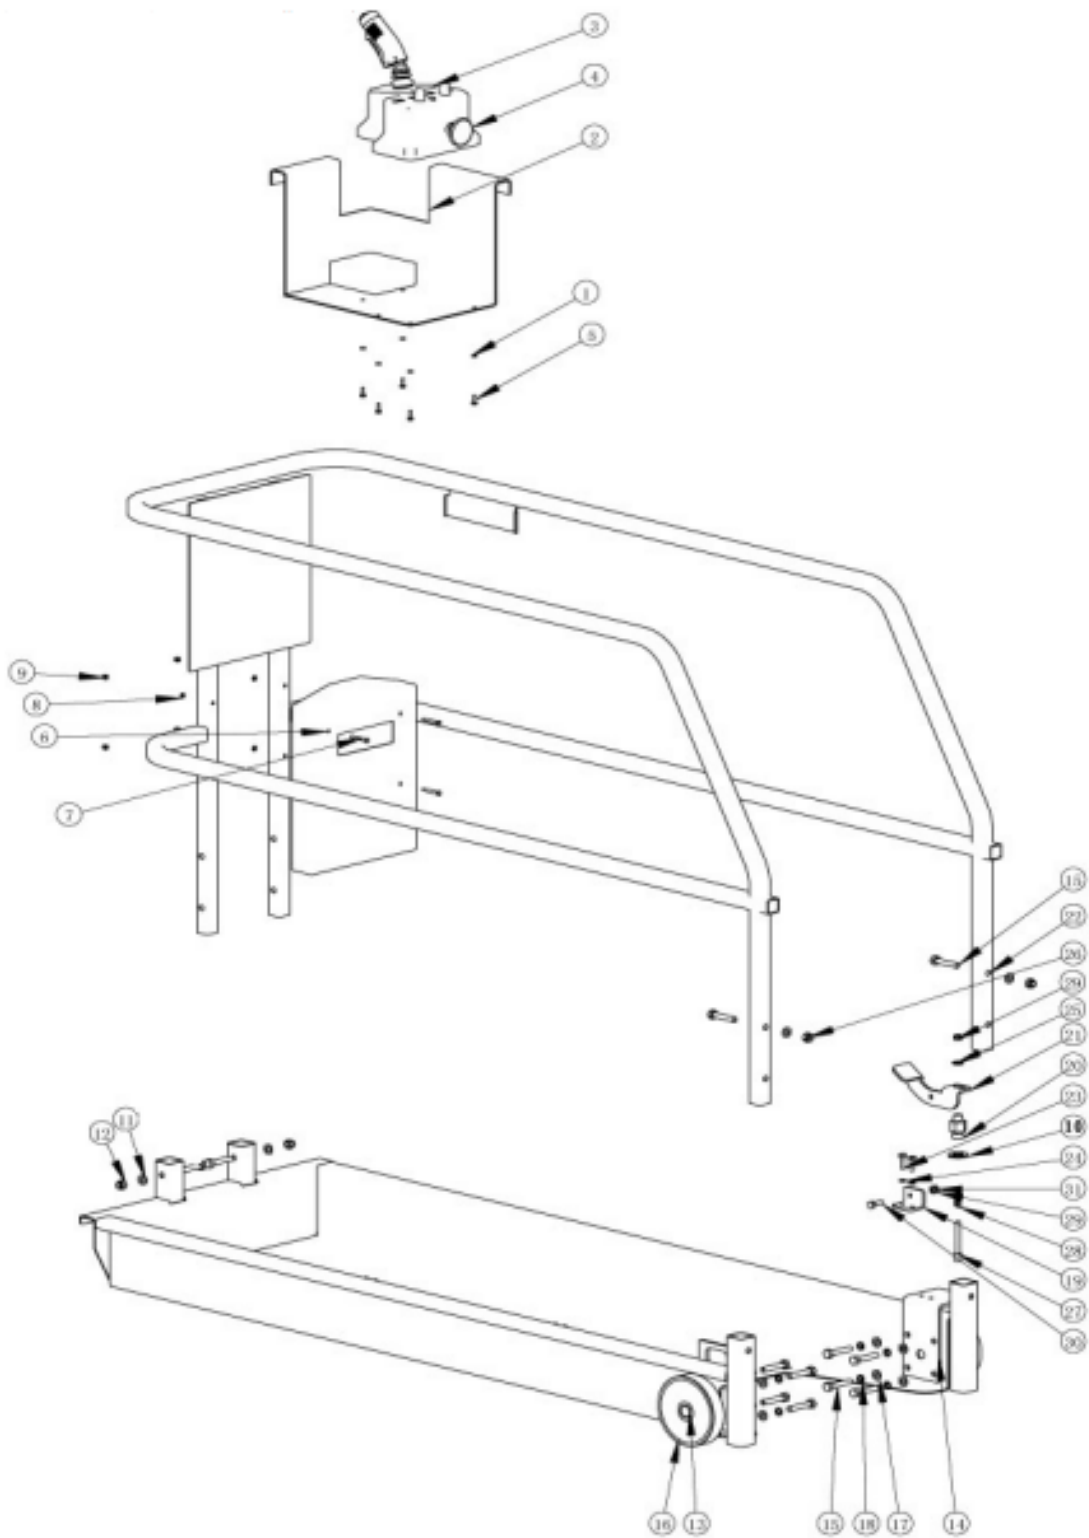

Items No.	Spare Parts No.	Spare Parts Name	Quantity
1	031005J037	GB95-2002 flat gasket M5	9
2	021005J245	Upper control hanging plate	1
3	051005J031	handle	1
4	051003C062	Emergency stop button	1
5	031005J015	GB5782-2000 screw bolt M6X15	5
6	021005J129	Column frame square plate	1
7	031005J001	Screw bolt M10X45	4
8	031005J038	GB95-2000 gasket M10	9
9	031005J009	GB6182-2000 self-locking nut M10	4
10	031003C168	GB95-2000 gasket M20	1
11	031005J038	GB95-2000 gasket M10	13
12	031005J009	GB6182-2000 self-locking nut M10	4
13	021005J009	Wheel axis	2
14	021005J142	Wheel fixed plate	1
15	031005J003	GB5782-2000screw bolt M10X60	12
16	021005J044	Pulleys	2
17	031005J038	GB95-2000 gasket M10	13
18	031005J038	GB95-2000 gasket M10	8
19	021005J120	Limit card	1
20	021005J008	Limit pin	1
21	021005J144	Limit feet plate	1
22	021005J102	Guardrails on the platform	1
23	031003C012	GB5783-2000 screw bolt M8X25	2
24	031003W009	GB95-2000 gasket M8	2
25	031005J038	GB95-2000 gasket M10	13
26	031005J009	GB6182-2000 self-locking nut M10	4
27	051005J006	Limit vessel	1
28	021005J180	Limit spring	1
29	031005J039	GB6182-2000 self-locking nut M8	2
30	031003C012	GB5783-2000 screw bolt M8X25	1
31	031003W009	GB95-2000 gasket M8	1